

4


3

2

1

This length could be way too long due to after market U-Bolts

We measure to the top of nuts then add 1/2" to be sure the bolt goes thru the nut

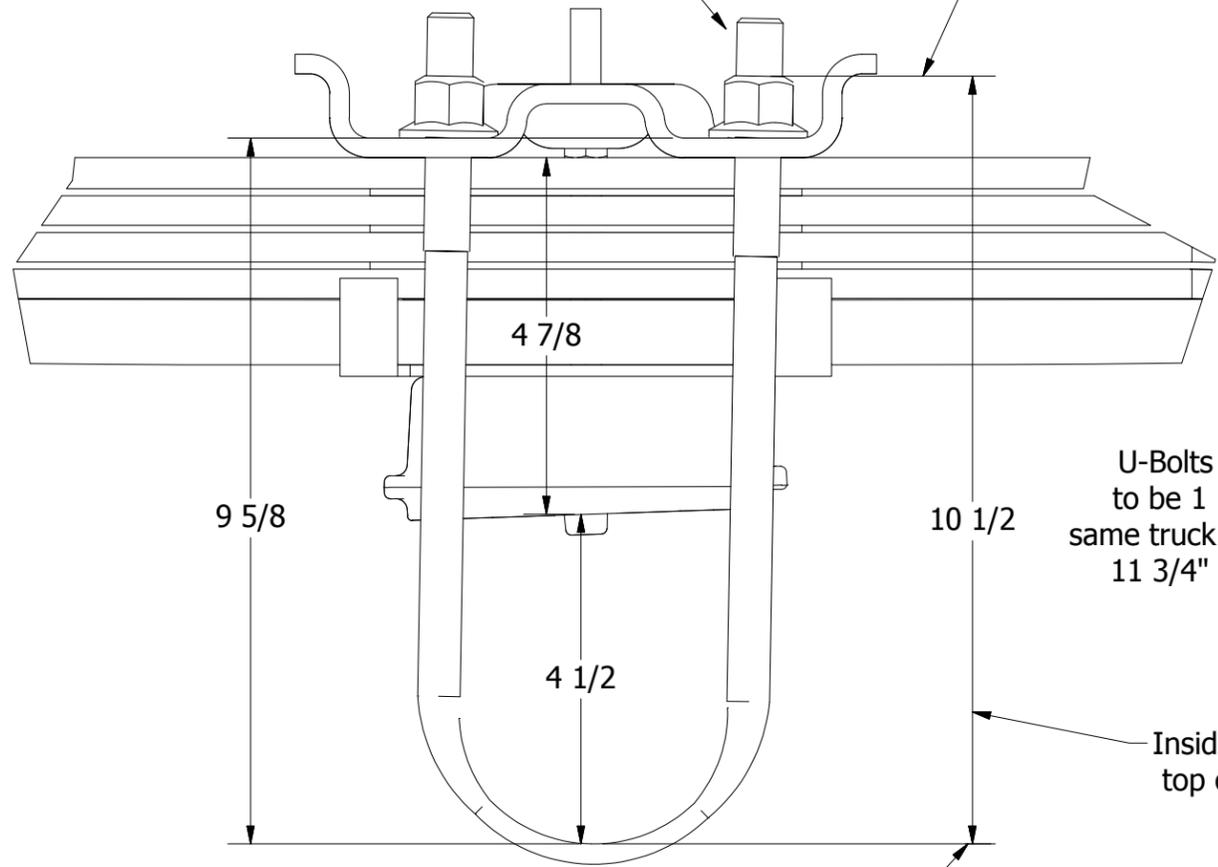


10 1/2" will NOT be how long your U-Bolts are. This is just an example. All Trucks are different. You need to measure your truck's U-Bolts so you don't get the wrong length U-Bolts.

U-Bolts Down Set up needs to be 1 1/4" longer then the same truck set up with U-Bolts up $11\ 3/4" - 10\ 1/2" = 1\ 1/4"$

Inside of U-Bolt to top of nut length

Inside of U-Bolt to top of nut length

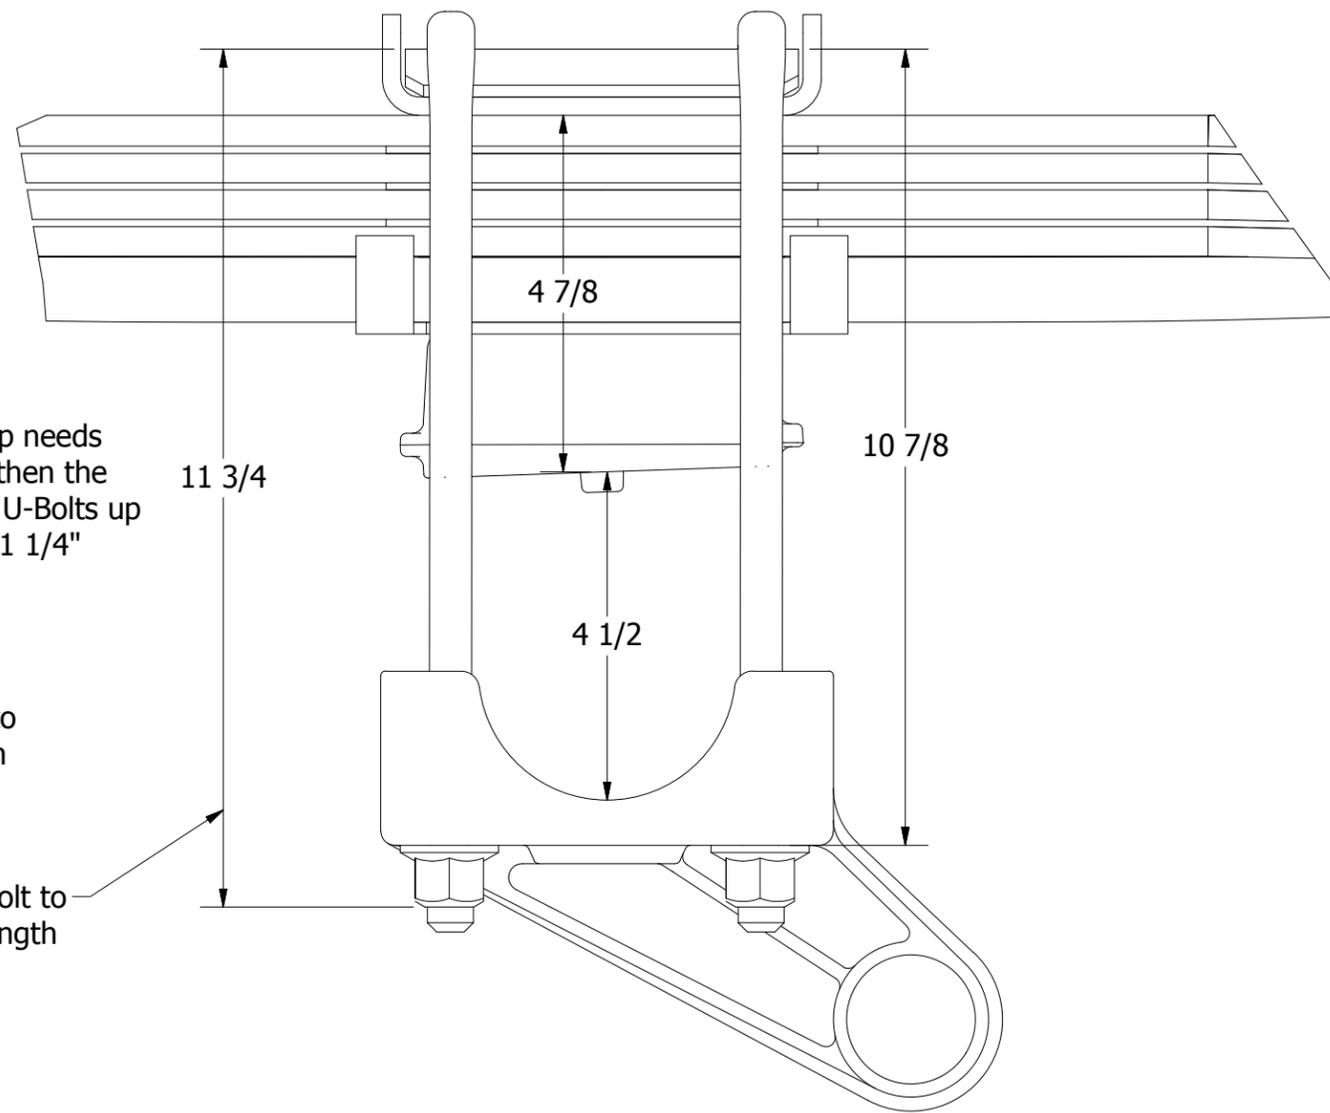

If you have U-Bolts "UP" get your trucks "Inside of U-Bolt to top of nut length" on your truck now and add 1 1/4" to that length to get the new U-bolt length you need to order.

DRAWN Dave	10/22/2007	Confidential Information. Copyrighted on date of inception. Do not share with any third party. If you are looking at this and One Up Offroad is not aware you are looking at it you are not suppose to be looking at it.		
CHECKED		TITLE		
QA		One Up Offroad		
MFG		SIZE	DWG NO	REV
APPROVED		B	Ubolt Length check	
		SCALE	SHEET 1 OF 1	